


MOOVY

PISCINE À BALLES | BALL POOL | PISCINA DE BOLAS | BÄLLEBAD
BALLENBAD | PISCINA CON PALLINE | BASEN Z KULKAMI

REF : 214473 MOD




1

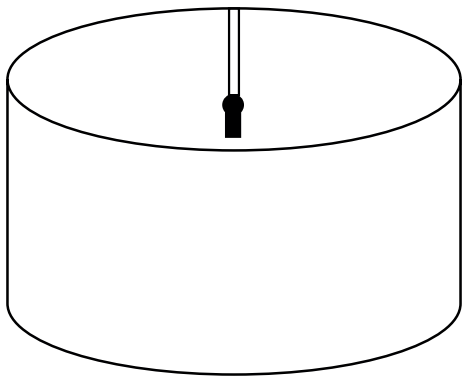

- 1- Descendre la fermeture éclair
- 2- Insérer la base en mousse
- 3- Mettre les balles et/ou les jouets (recommandé : 500 balles)

- 1- Undo the zip
- 2- Insert the foam base
- 3- Put in balls and/or toys (recommended: 500 balls)

2

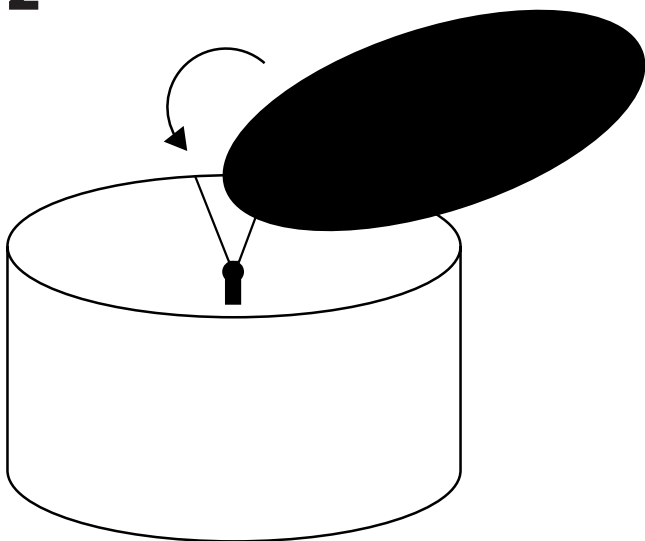


- 1- Descer o fecho de correr
- 2- Inserir base de espuma
- 3- Colocar bolas e/ou brinquedos (recomendado: 500 bolas)

- 1- Bajar la cremallera
- 2- Insertar la base de espuma
- 3- Introducir las pelotas o juguetes (recomendado: 500 pelotas)

- 1- Den Reißverschluss nach unten ziehen
- 2- Die Schaumstoffbasis einführen
- 3- Die Bälle bzw. das Spielzeug hineingeben (empfohlen: 500 Bälle)

- 1- Open de rits
- 2- Plaats de schuimrubberen basis
- 3- Doe er ballen en/of speelgoed in (aanbevolen: 500 ballen)

3

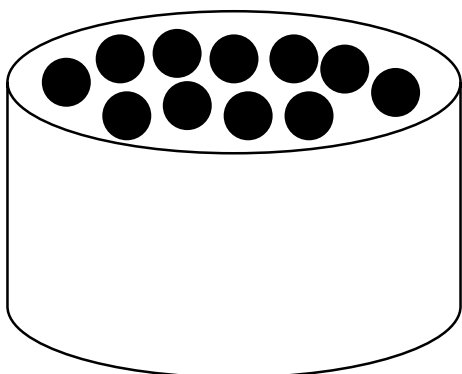

- 1- Tirare giù la cerniera
- 2- Inserire la base in mousse
- 3- Inserire palline e/o giocattoli (consigliato: 500 palline)

- 1- Rozsuń zamek błyskawiczny
- 2- Włóż podstawę z pianki
- 3- Włóż piłki i/lub zabawki (zalecane: 500 piłek)

