



atmosphera®  
Créateur d'intérieur

## ELSY

**DIFFUSEUR D'HUILES ESSENTIELLES | ESSENTIAL OILS DIFFUSER | DIFUSOR DE ÓLEOS ESSENCIAIS | DIFUSOR DE ACEITES ESENCIALES | DIFFUSOR FÜR ÄTHERISCHE ÖL | DIFFUSER VOOR ETHERISCHE OLIËN | DIFFUSORE DI OLI ESSENZIALI | DYFUZOR OLEJKÓW ETERYCZNYCH**

**REF : 207014MOD**



ATMOSPHERA  
CRÉATEUR D'INTÉRIEUR®  
JJA - 4 rue de Montservon  
95500 GONESSE - FRANCE



RETROUVEZ-NOUS SUR  
**atmosphera.com**  
créateur d'intérieur

# DIFFUSEUR D'ARÔME



## MANUEL D'UTILISATION

### Étapes de l'opération


1. Retirez le diffuseur d'arômes.
2. Branchez l'adaptateur 5V-1A sur la prise DC du diffuseur.

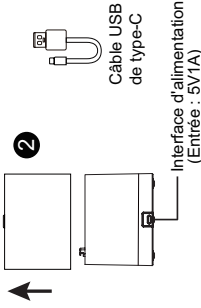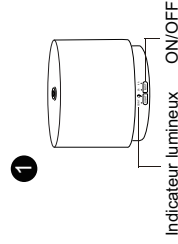


3. Ajoutez de l'eau, ne dépassez pas la valeur maximale (le niveau d'eau le plus élevé).

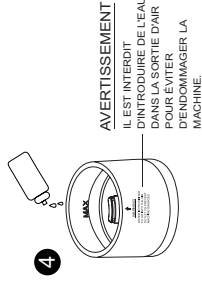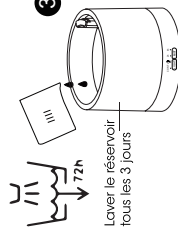

5. Placez le couvercle extérieur, appuyez sur « LUMIÈRE » = allumez la LED à 100 % de sa luminosité, appuyez sur « BRUME » = activez le mode de brumisation continue.

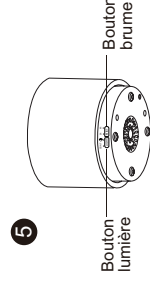

6. Videz l'eau et nettoyez.

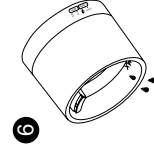

### Paramètres de base

Nom du produit : diffuseur d'arôme  
Modèle de base : CR006  
Matériel : ABS+PP  
Tension de charge : 5V1A  
Puissance d'utilisation : 4.5±0.5W  
Capacité : 100ml  
Couleur de l'éclairage : lumière chaude (2700K)  
Quantité de brume : 7-12ml/h  
Dimensions du produit : Ø122\*H102mm  
Transformateur associé : SG-051000AE

### Fonctionnement de base

#### Fonction du bouton LUMIÈRE «LIGHT»

- Première pression : la lumière LED s'allume à 100 % de sa luminosité et un bip retentit ;
- Deuxième pression : la lumière LED s'allume à 50 % de sa luminosité et un bip retentit ;
- Troisième pression : la lumière LED s'allume à 25 % de sa luminosité et un bip retentit ;
- Quatrième pression : la lumière LED s'éteint et un bip retentit ;
- Une pression prolongée sur la touche LUMIÈRE éteint la brume ainsi que la lumière, et un bip retentit.

#### Fonction du bouton BRUME «MIST»

- Première pression : allume le brouillard en mode de fonctionnement continu, et un bip retentit ;
- Deuxième pression : fait passer l'appareil en mode intermittentⓄ, et un bip retentit ;
- Troisième pression : fait passer l'appareil en mode de programmation de 2 heures, et un bip retentit ;
- Quatrième pression : fait passer l'appareil en mode de programmation de 4 heures, et un bip retentit ;
- Cinquième pression : éteint la brume, et un bip retentit.
- Une pression prolongée sur le bouton BRUME éteint la brume et la lumière, et un bip retentit.

### Précautions d'emploi

1. Le diffuseur ne doit pas fonctionner si le réservoir d'eau est vide.
2. Nettoyez régulièrement l'orifice du réservoir d'eau à l'aide de cotons-tiges doux.
3. Le diffuseur est doté d'une fonction de coupure de courant automatique en l'absence d'eau.
4. Le diffuseur doit être placé sur un plan stable, à l'abri des sources de chaleur et de la lumière directe du soleil.
5. Le diffuseur ne convient pas aux endroits humides, veuillez garder le fond et le réservoir secs en dehors des périodes d'utilisation.
6. Si vous constatez la présence d'un dépôt d'huile ou d'eau sur le produit après un certain temps d'utilisation, vous pouvez le nettoyer délicatement avec un chiffon en coton.
7. Le diffuseur doit être utilisé avec le transformateur fourni #SG-051000AE. Le diffuseur doit être alimenté uniquement sous la très basse tension de sécurité correspondant à ses caractéristiques assignées (5Vd.c., 1A).

### Avertissement

1. Ce diffuseur doit utiliser le câble d'alimentation USB adapté avec le port Type-C.
2. N'utilisez pas le diffuseur en l'absence d'eau.
3. N'ajoutez pas d'huile essentielle directement à partir de la sortie du diffuseur.
4. N'utilisez pas d'eau à une température supérieure à 60 °C afin d'éviter tout dommage.
5. Gardez le produit hors de portée des enfants.
6. Ne placez pas le diffuseur dans une position supérieure à 40 °C, inférieure à 0 °C, dans une position fortement magnétique, afin d'éviter tout dommage ou danger.
7. L'appareil ne doit pas être démonté par des personnes non-professionnelles.
8. Il est interdit d'introduire de l'eau dans la sortie d'air afin d'éviter d'endommager l'appareil.

# AROMA DIFFUSER

## USER MANUAL


### Warning

1. Unplug the appliance during filling and cleaning.
2. This appliance can be used by children aged from 8 years and above, and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
3. Children shall not play with the appliance.
4. Cleaning and user maintenance shall not be made by children without supervision.
5. The instructions for appliances having a part of class III construction supplied from a detachable power supply unit shall state that the appliance is only to be used with the power supply unit provided with the appliance.
6. This diffuser must use the correct USB power cable with the Type-C port.

7. Do not run in the absence of water.
8. Do not add essential oil directly from the mist outlet.
9. Do not use water higher than 60 degrees Celsius to avoid damage.
10. Do not place the diffuser in a position higher than 40 degrees Celsius lower than 0 degrees Celsius, strong magnetic position, so as to avoid damage or danger.
11. Do not disassemble by non-professional personnel.
12. Water is prohibited to go into the air outlet to prevent machine damaged.
13. Be aware that high humidity/levels may encourage the growth of biological organisms in the environment.
14. Do not permit the area around the humidifier to become damp or wet. If dampness occurs, turn the output of the humidifier down. If the humidifier output volume cannot be turned down, use the humidifier intermittently. Do not allow absorbent materials, such as carpeting, curtains, drapes, or tablecloths, to become damp.

### Operation Steps

1. Take out the aroma diffuser.
2. Take the 5V=1A adapter connect to the DC jack of the diffuser.

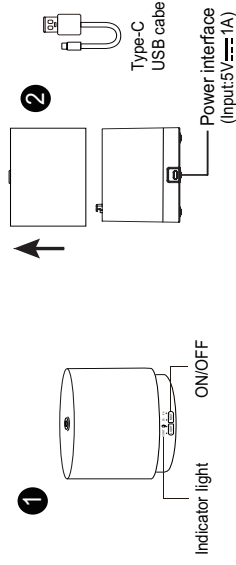

### Warning

15. Never leave water in the reservoir when the appliance is not in use.
16. Empty and clean the humidifier before storage. Clean the humidifier before next use. Micro-organisms that may be present in the water or in the environment where the appliance is used or stored, can grow in the water reservoir and be blown in the air causing very serious health risks when the water is not renewed and the tank is not cleaned properly every 3 days.
17. Empty the tank and refill every third day. Before refilling, clean it with fresh tap water or cleaning agents if required by the manufacturer. Remove any scale, deposits, or film that has formed on the sides of the tank or on interior surfaces, and wipe all surfaces dry.

Clean the water tank every three days.

### Precautions

1. Do not run the diffuser when there is no water.
2. Clean the hole in the water tank regularly with soft cotton swabs.
3. The diffuser has the function of automatic power failure without water.
4. The diffuser should be placed on a stable plane away from heat source avoid direct sunlight.
5. The diffuser is not suitable for wet places, please keep bottom and tank dry when not in use.
6. When there is oil or water scale on the product after using a period of time, you can gently clean it with cotton cloth.
7. The diffuser must be used with the SG-051000AE transformer supplied. This diffuser must be used with the specified input voltage corresponding to its assigned characteristics (Vd.c., 1A).

### Basic Operation

#### LIGHT Button Function

- First Press : turns on LED light at 100% brightness, and a beep will sound;
- Second Press : turns the LED light to 50% brightness, and a beep will sound;
- Third Press : turns the LED light to 25% brightness, and a beep will sound;
- Fourth Press : turns off LED light, and a beep will sound;
- Long press the LIGHT button will turn off mist and lights, and a beep will sound.


#### MIST Button Function

- First Press : turns on the mist to continuous working mode, and a beep will sound;
- Second press: turns the device to intermittent mode (☺) and a beep will sound;
- Third press : turns the device to 2 hour timing mode and a beep will sound;
- Fourth press : turns the device to 4 hours timing mode, and a beep will sound;
- Fifth press : turns off the mist, and a beep will sound;
- Long press the MIST button will turn off mist and lights, and a beep will sound.


### Basic Parameters

Product Name: Aroma diffuser  
 Model No: CR006-001  
 Material: ABS+PP  
 Input: 5V=1A  
 Capacity: 100mL  
 Lighting Color: Warm Light(2700K)  
 Mist Amount: 7-12mL/h  
 Product Size: Φ122\*H102mm  
 Integrated transformer : SG-051000AE


4. Add 3-4 drops of essential oil.

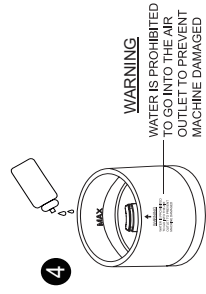


3. Add water, do not exceed the maximum value (the highest water level).

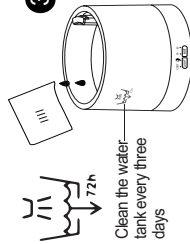

5. Cover the outer cover, press "LIGHT" = turns on LED at 100% brightness, press "MIST" = turns on the continuous mist mode.

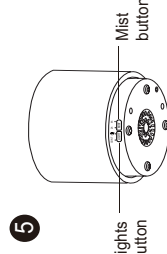

6. Drain away water & clean.

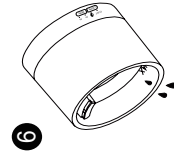

Points de collecte sur [www.quefairedesdechets.fr](http://www.quefairedesdechets.fr)  
 Privilégiez la réparation ou le don de votre appareil !

